



# *Pronto*

wonen

**MODEL : FLORENTINO PDC-823F**

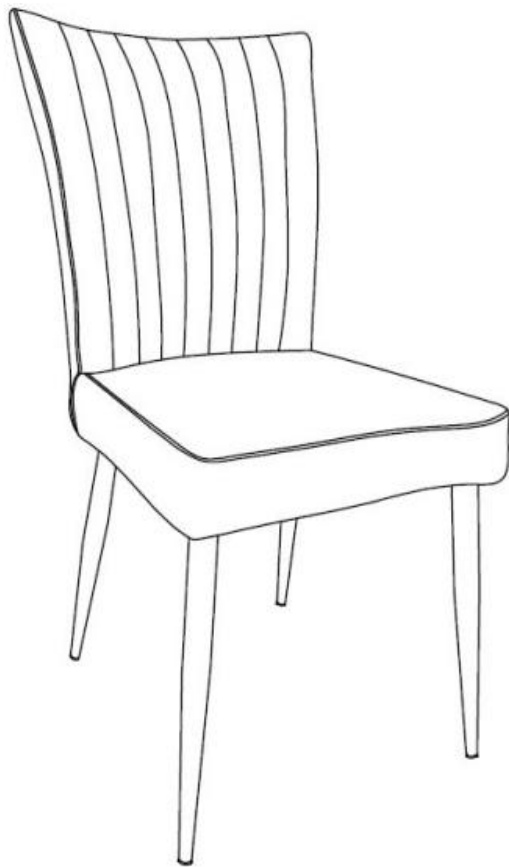

# ASSEMBLY INSTRUCTION

A



M6x16 x4

B




M6 x4

C



x1

## STEP 1

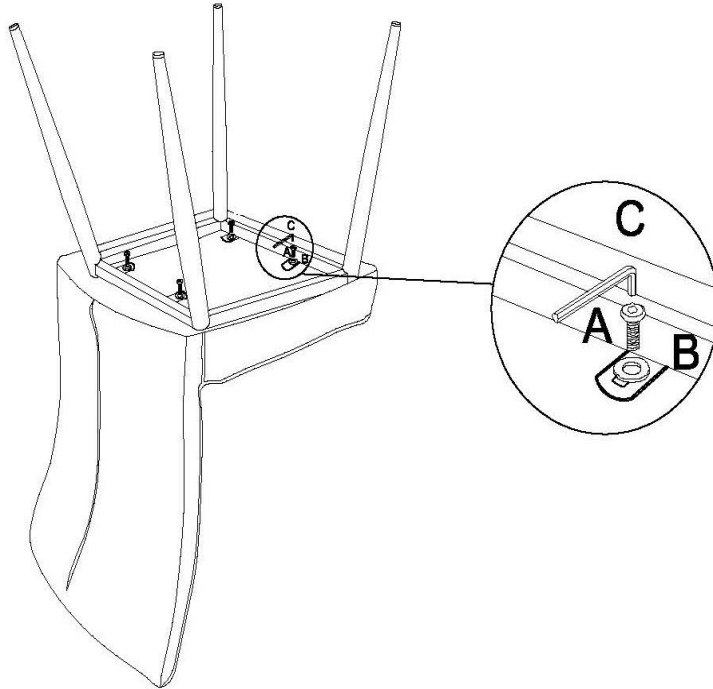

## STEP 2

