

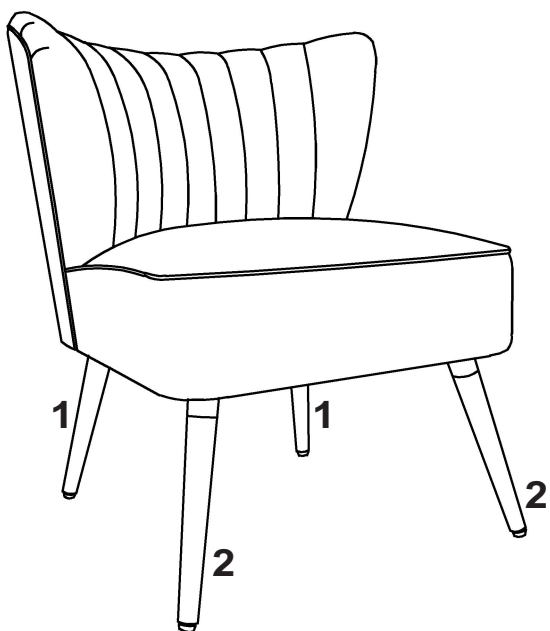


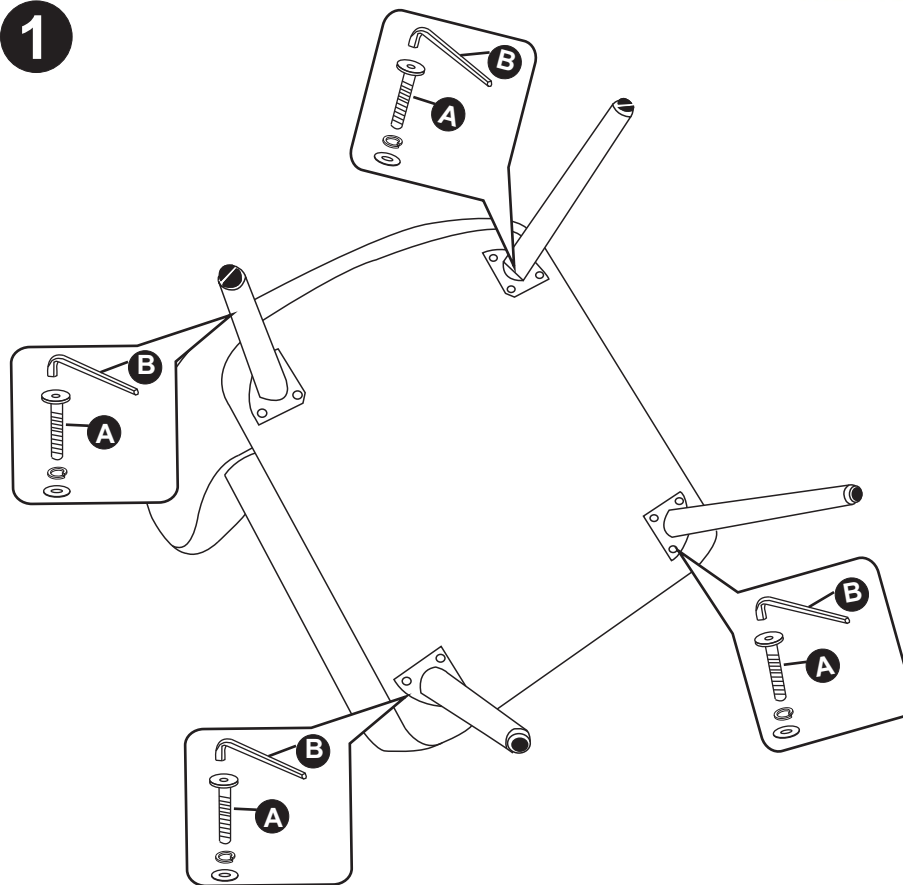
ASSEMBLING INSTRUCTION AVISIO WR1091



Pronto
wonen

HARDWARE LIST	CODE	PARTS	QTY.
	1		2
2		2	



1



HARDWARE LIST	CODE	PARTS	QTY.
	A	M6x20MM	
B	ALLEN KEY		1