







Pronto

wonen


MODEL : BOTELLO PDC-4081W

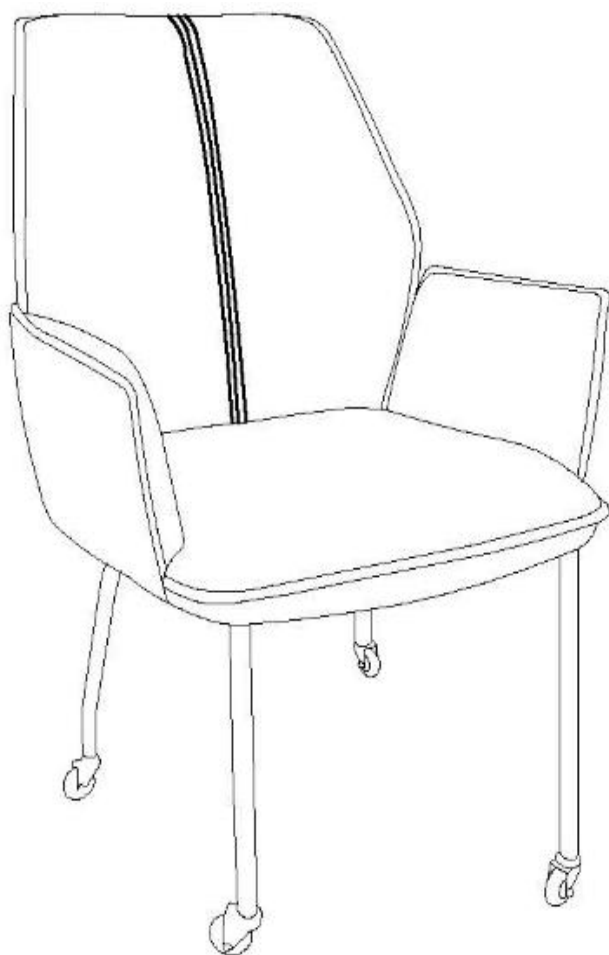

ASSEMBLY INSTRUCTION

A  M5 x1	B  M6*16 x4	C  M6 x4	D  x4		
---	--	---	---	--	--

STEP 1

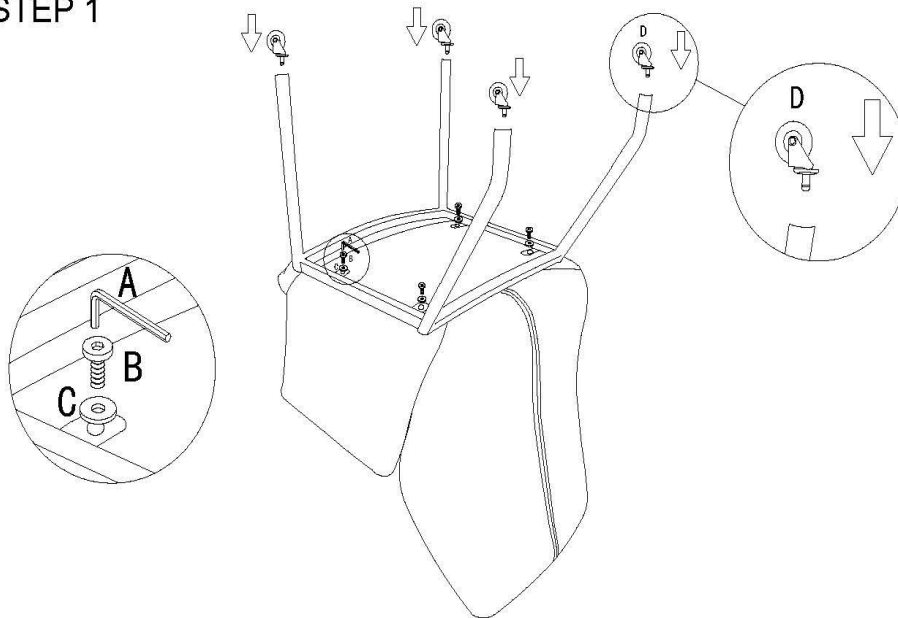

STEP 2

