



Pronto

wonen

MODEL : SERRADO PBS-110

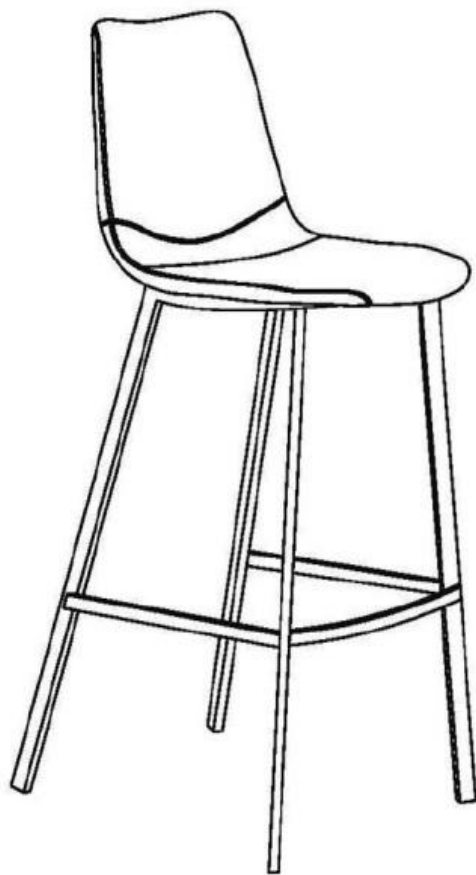

ASSEMBLY INSTRUCTION

A)



M6x16 x4

B)




M6 x4

C)



x1

STEP 1

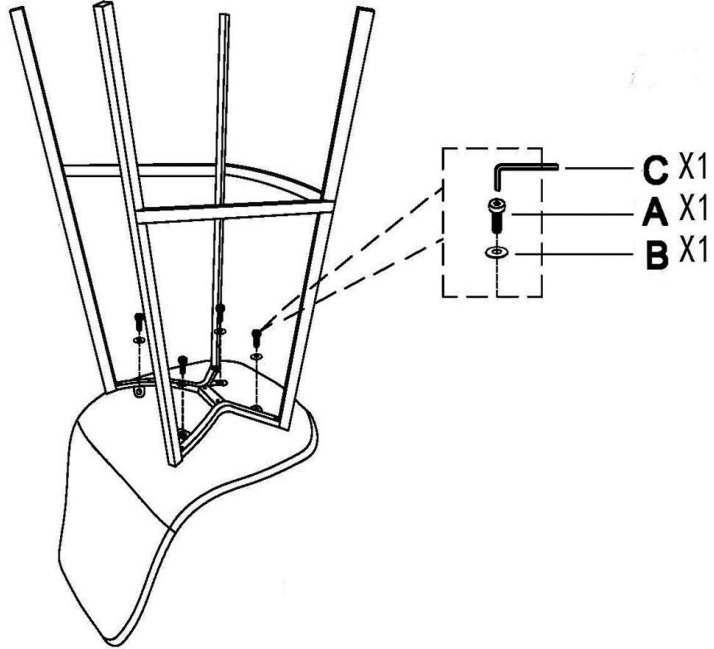

STEP 2

